


## ElektraLite elektraBar Mini

- Press “Menu” to display the root Menu. Those are STAT, AUTO, RUN, CH, A001 and SOUND.
- Press “up” ↑ / “down” ↓ to choose
- Press “ENTER” to confirm

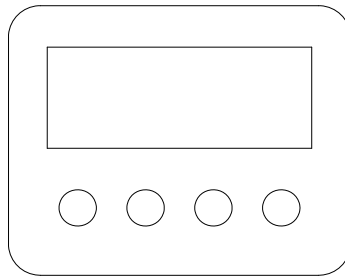

Menu Enter ↑ ↓

1	STAT	R 000-255	Red dimming	
		G 000-255	Green dimming	
		B 000-255	Blue dimming	
		W 000-255	White dimming	
		A 000-255	Amber dimming	
		I 000-255	Indigo dimming	
		S 000-255	Strobe	
2	AUTO	PR01	A000-255	Chase speed
			F000-255	Not Used
			S001-008	Chose 1 of 8 preprogrammed chases
		PR02	A000-255	Chase step
			F000-255	Not Used
			S001-008	Chose 1 of 8 preprogrammed chases
		PR03	A000-255	Chase speed
			F000-255	Not Used
			S001-008	Chose 1 of 8 preprogrammed chases
3	RUN	DMX	When DMX is dis-engaged, the last DMX signal is locked on and output is maintained	
		STMT	When DMX is dis-engaged, the setting in STAT(static) is locked on and maintained	
4	CH	60CH	This mode use all 60 channels of the mini bar	
		11CH	This mode only uses the first 11 channels	
5	A001	Address 001 – Address 512		
6	SOUND*	Sound Activation		

\*Sound activation will move the auto program from one cue to another by “listening” to the bass beat of the music. Remember no bass beat then the program will remain static in the cue and not move to the next cue.