

ELKTRAHAZE DMX ASSIGNMENTS.



The function of the 4 channels are as follows:-

Channel 1: Main 0~85 OFF

86~169 Timer Mode (Interval & Duration can be set via Channel 2 & 3)

170~255 Manual Mode (Volume can be set via Channel 4)

Channel 2: Interval 0~255 10~250 seconds

Channel 3: Duration 0~255 1 ~ 15 seconds

Channel 4: Volume 0~255 0% ~ 100% output