

# elektraLite

## elektraLite Stingray USER MANUAL (Version 1.3) For WW or CW COB



**ElektraLite (a division of Group One),  
70, Sea Lane, Farmingdale, NY11735, U.S.A.  
T. +1 (631)-396-0184. F. +1 (631)-396-0190  
[WWW.MYELEKTRALITE.COM](http://WWW.MYELEKTRALITE.COM)**

## 1. Unpacking

Thank you for choosing the **elektraLite Stingray** fixture. For your own safety and to avoid any problems during installation or in operation, please read this manual before installing the fixture. This manual covers important information on installation and applications. Please keep this manual for future reference.

**ElektraLite Stingray** profile spot fixture uses a single 300 watt COB led. Please unpack the **elektraLite Stingray** carefully and check whether it was damaged in shipping.

The following item should be in the box with the fixture:-

- A Powercon blue Power Input cable
- A White Powercon White Output connector

## 2. Safety Instructions. (Please read them).

The fixture has left the factory in perfect condition. In order to maintain this condition and to ensure a safe operation, it is absolutely necessary for the user to follow the safety instructions and warning notes written in this user manual. **ElektraLite Stingray** is a high voltage fixture. Be careful when dealing with high voltages.

**Please read this manual. If you do not read this manual and damages occur to the elektraLite Stingray, then it could void the warranty.**

During shipping, the **elektraLite Stingray** may have been exposed to high temperature changes or humidity changes. So, as a precaution, do not switch the **elektraLite Stingray** on immediately. Condensation can damage the **elektraLite Stingray** so leave the **elektraLite Stingray** switched off until it has reached room temperature. The **elektraLite Stingray** is an **INDOOR** operational fixture. Do not operate this fixture **outdoors** or anywhere there is high **humidity**.

The electric connection must carry out by a qualified person and it is absolutely essential that the **elektraLite Stingray** be **grounded**. So under no circumstances break off the ground pin on the Edison plug or use the fixture where a ground is not present. A ground pin, like the fuse for the **elektraLite Stingray** is there for safety.

Do not grab the power cord and pull out the Edison plug by pulling on the power cord itself. This could cause damage to the cord, Edison plug and/or the fixture itself.

Please keep the **elektraLite Stingray** away from children and the general public. Please be intelligent and use common sense when operating the **elektraLite Stingray**.

## 3. General Guidelines.

**ElektraLite Stingray** is a lighting fixture for professional use on stages, in clubs, theatres, churches etc.

**ElektraLite Stingray** should only be operated at between 120 to 240 volts and only indoors.

**ElektraLite Stingray** should not be operated 24/7 (24 hours a day; 7 days a week). **ElektraLite Stingray** needs operation breaks to ensure that it will work for a long time without problems. Please do not shake the **elektraLite Stingray** and avoid using brute force when installing or operating it.

When choosing the location to install the **elektraLite Stingray**, please make sure that it is not exposed to extreme heat, moisture or dust and never install it outdoors. Make sure that the fixture has a good amount of free space around it for air flow. Do not install it in a confined space or have insulation around the fixture. The minimum distance between the **elektraLite Stingray** and the illuminated surface must be more than 3 feet.

Always mount the **elektraLite Stingray** with an appropriate safety cable.

Operate the **elektraLite Stingray** only when you are familiar with the features of the fixture. Do not permit operation by persons not qualified.

All modifications to the **elektraLite Stingray** will invalidate the warranty. There are absolutely no exceptions.

If **elektraLite Stingray** is operated in any way different to the one described in this manual, **elektraLite Stingray** may be damaged and the guarantee will be void.

## 4. Installation

Please ensure that the **elektraLite Stingray** is hung using the appropriate "C" clamp or half cheeseboro. A safety chain or cable should also be used as a secondary point of holding the fixture in case the clamp comes loose. Never hang the fixture without a safety chain or cable. There is an eye-bolt on the back of the fixture to which the safety chain or cable can threaded through and then hung from the secondary point. Make sure, if you are using a Gel frame (Gel holder), that it is clipped into position correctly and cannot come loose.

If you are not qualified or have any doubts about hanging the **elektraLite Stingray** then do **NOT** hang it.

Do not clamp the safety cable to the U bracket or clamp. That is not a secondary safety point.

A secondary safety point is any point that will adequately hold the **elektraLite Stingray** if the "C" clamp or half cheeseboro fails. Then the safety cable would be the backup and stop the fixture from falling to the ground. So do **NOT** fix the safety cable to the same place that the "C" clamp is attached.

## Installation during construction.

Many times fixtures are installed during the construction phase of a building. It is imperative that the fixture is protected during this phase. A lot of dust is usually created. This dust can adversely affect the fixture. Specifically, of course, in coating the lenses and therefore reducing the output. However much more seriously, dust, like sheetrock dust, can get inside the fan bearings especially if the fixture is being operated during construction. Sheetrock dust, mixed with the grease of the fan motor, will result in the fan's premature failure and that is not covered under the fixture's warranty. It is therefore strongly advised to keep the fixtures covered up during the construction phase and not used.

## 5. Grounding. (VERY IMPORTANT!!!)

**Always make sure that there is sufficient grounding (earth) for the fixture.** This is not only imperative within the circuit that the fixture is being connected to, but also make sure there is sufficient grounding into the building. All fixtures regardless of manufacturer have a surge at initial "turn-on". Once initial "turn-on" is complete, the surge current (per fixture) will travel down the ground. While each 20 Amp circuit may have the correct size of ground wire, the ground input to the building and/or electrical panel may not be sufficient for the job. **Please review this with the electrical contractor.**


One further check : the ground to neutral voltage for each circuit. In a lot of buildings, voltages across these can damage fixtures or cause operational problems both for the fixture and DMX.

Please review these two important points with a qualified electrical contractor. If in any doubt, have an independent qualified third party electrical contractor check the installation, **well before** commencing installation.

## 6. DMX-512 Control Connection

Connect an XLR cable to the female 5-pin XLR output of the DMX controller. The other end should be connected to the male 5-pin XLR input of the **elektraLite Stingray**. Then daisy-chain out of the first **elektraLite Stingray** into the next **elektraLite Stingray** or other dmx device. Never "Y" split the DMX connection.


If more cable is needed, then it should be two core, screened cable fitted with a 5 pin XLR input and output connector. Please refer to the diagram below.

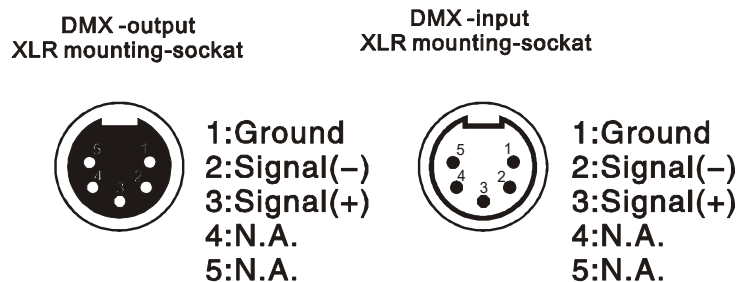

## 6. DMX-512 Control Connection (cont).

### DMX-512 connection with DMX terminator

For installations where the DMX cable has to run a long distance or is in an electrically "noisy" environment, it is recommended that a DMX terminator is used. This helps prevent corruption of the digital control signal. The DMX terminator is simply a 5 pin XLR plug (male) with a 120  $\Omega$  resistor connected between pins 2 and 3. It is then plugged into the output XLR socket of the last **elektraLite Stingray** or other dmx device in the chain. Please see illustration below.

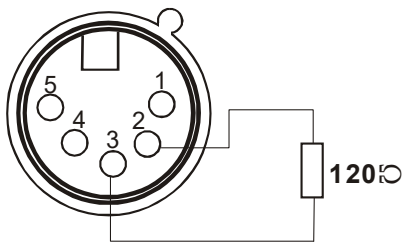

## 7. Menus in the fixture.

There are just three menu screens with the **elektraLite Stingray**.

These are the modes of operation for the fixture.

### DMX (1ch).

#### Dimmer

#### Run Mode

Root Menu	value
DMX (CH1)	000-512
Dimmer	000-255
Run Mode	1CH -2CH

### A). DMX (1ch)

This sets up the start address number for the fixture.

Use the ↑ or ↓ buttons to get to the correct start address.

It will be a value of 001 to 512.

### B). Dimmer. (A static look)

The **elektraLite Stingray** can be set to a single static look quickly.

It requires no dmx input signal.

Use the Menu button to get to **Dimmer**.

Use the ↑ or ↓ to increase the output from 000 – 255.

Once the desired output is reached Press Enter to save the output value.

### C). Run Mode.

The **elektraLite Stingray** can be run in either a 1 channel (1ch) or 2 channel (2ch) mode.

Use the ↑ or ↓ buttons to choose which Run mode is best suited.

In 1ch mode the one channel is a dimmer channel only.


In 2ch mode the function of DMX values are as follows:-

channel	Function	Value
CH1	dimmer	000-255
CH2	No function	000-015
	Shortest dimmer curve	016
	Longest dimmer curve	255

## 8. High Speed Cameras.

When high speed cameras are being used, the 2ch mode of operation should be used.

## 9. Description of Parts.

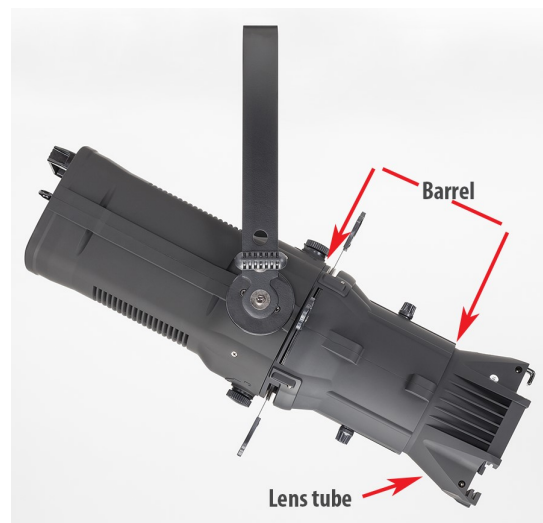

The Gobo slot will take a standard gobo holder.

There are 4 independently moveable shutter blades.

Undoing the two barrel locks will allow the barrel to be rotated 360° or removed and shutters cleaned.

Always make sure the gel frame clip is down and locked if the gel frame is in place.

Undoing the two lens locks will allow the lens tube to be moved up or down.

Removing the two lens locks will allow the lens tube to be removed.

The **elektralite Stingray** lens tubes available are : 5°, 10°, 19°, 26°, 36° and 50°.

## 10. Cleaning and maintenance.

Now ignoring maintenance and cleaning is very good way of creating problems "down the road" and many companies and installations do just that. However the net result is, no matter what the fixture, premature failure!

Changing the oil in a car, most people do on a regular basis.

So with the fixtures, regular maintenance is an excellent practice, if you want the fixtures to last.

So what is the maintenance for the fixture?

### Clean the fans!

Turn off the **elektraLite Stingray**.

Using a small vacuum cleaner, suck the dust and "fur balls" out.

Do not use a can of CO<sub>2</sub>. That will just blast the dust and dirt everywhere!

The fans keep the LED cool and keep the electronics cool too.

Without the fan working efficiently and dust free, the fixtures will fail and that will be a lot more costly than having someone vacuum the fixtures on a regular basis.

How often should the fans be cleaned? It depends on where the fixtures are; in a very dusty atmosphere once a week. So check the fans on a regular basis, they may not need cleaned every week but a quick "visual inspection" should be done.

The front lens should be cleaned so the light output is maintained.

The shutter blades sometimes require cleaning as well.

With the **elektraLite Stingray** turned off, use only a moist lint-free cloth. Never use alcohol or solvents to clean the fixture. Never spray anything onto the fixture at the front or in any place on the fixture.

## 11. Technical Specification.

- Operating voltage 100 – 250v
- Frequency 50 – 60 Hertz
- 300 watt Warm White led
- Fan cooled
- 8.5" x 24" x 6.25"
- 18 pounds

**ElektraLite is a division of Group One. Group One and its divisions are constantly improving their product range and we reserve the right to make changes without prior notice.**

## Other Products.

For other great products that are manufactured under the elektraLite product line, please go to the website at [www.myelektraLite.com](http://www.myelektraLite.com)

A preview of the products include:-

Elektralite Elektrabar with glare shield for perfect cuts



Utilizing homogenized 6-in-1 leds. RGBWAI where the I is indigo ; this way perfect pastels like Lee 170 Lavender are flawlessly achieved.

The Elektralite 1018



Using 18 high powered 12 watt leds, the Elektralite 1018 is available using 4-in-1 or 6-in-1 leds. Each led can produce any combination of colors as each led is either an RGBW or RGBWAI device

### Elektralite ML902



The ML902 utilizes a 120 watt Led and is brighter than a 250 discharge light source. Features include:- Color wheel, two gobo wheels, rotating gobos, rotating 3 facet prism, focus, dimmer, strobe and 16 bit pan and tilt.

### Elektralite SLA



The SLA is the perfect compact IP65 fixture for accent lighting everything from trees and walls to product high lighting. Even though it is compact it packs a massive punch with its 15 watt Cree RGBW leds.



### Elektralite Dazer Downlight



The ideal pendant light. Made specifically for the installation market.  
Can be simply installed by an electrical contractor. 180 watts of power.  
Comes with 25 degree lenses installed but a lens pack (15°, 45°, & 60°) allows you to change the beam angles.